

M-Bus Energy Meter Technical data



Content overview:

1. Technical data M-Bus
2. Data transfer
3. Changing the M-Bus primary address
4. Secondary addressing
5. Reading meter
6. Telegram structure
7. Telegram structure (detailed)
8. Initialisation
9. Changing primary address
10. Reset ACC (application reset)
11. Secondary address

5. Reading meter

Query: REO_UD2

Response: RSP_UD (see Telegram structure)

6. Telegram structure

0x68	0x92	0x92	0x68	0x08	PAdr	0x72	ID	0x43	0x4c	DEV
02	ACC	STAT	0	0	0x8c	0x10	VIF	EtoT1	0x8c	0x11
VIF	EpaT1	0x8c	0x20	VIF	EtoT2	0x8c	0x21	VIF	EpaT2	0x02
0xFD	0xC9	0xFF	0x01	Vph1	0x02	0xFD	VIFE	0xFF	0x01	lph1
0x02	VIF	0xFF	0x01	Pph1	0x82	0x40	VIF	0xFF	0x01	Prph1
0x02	0xFD	0xC9	0xFF	0x02	Vph2	0x02	0xFD	VIFE	0xFF	0x02
lph2	0x02	VIF	0xFF	0x02	Pph2	0x82	0x40	VIF	0xFF	0x02
Prph2	0x02	0xFD	0xC9	0xFF	0x03	Vph3	0x02	0xFD	VIFE	0xFF
0x03	lph3	0x02	VIF	0xFF	0x03	Pph3	0x82	0x40	VIF	0xFF
0x03	Prph3	0x02	0xFF	0x68	RappW	0x02	VIF	0xFF	0x00	Ptot
0x82	0x40	VIF	0xFF	0x00	Prtot	0x01	0xFF	0x13	Cur_Tar	Csum
0x16										
Variable at 1, 2 or 4 bytes										

Byte	Content	Type	Description	Manufacturer-specific
23 – 26	EtoT1 = x	4 b. BCD	T1 total	
30 – 33	EpaT1 = x	4 b. BCD	T1 partial	
37 – 40	EtoT2 = x	4 b. BCD	T2 total	x (= 0 for WDM)
44 – 47	EpaT2 = x	4 b. BCD	T2 partial	x (= 0 for WDM)
53 – 54	Vph1 = x	2b. Integer	Voltage phase 1	
60 – 61	lph1 = x	2b. Integer	Current phase 1	
66 – 67	Pph1 = x	2b. Integer	Power phase 1	
73 – 74	Prph1 = x	2b. Integer	Reactive power phase 1	
80 – 81	Vph2 = x	2b. Integer	Voltage phase 2	
87 – 88	lph2 = x	2b. Integer	Current phase 2	
93 – 94	Pph2 = x	2b. Integer	Power phase 2	
100 – 101	Prph2 = x	2b. Integer	Reactive power phase 2	
107 – 108	Vph3 = x	2b. Integer	Voltage phase 3	
114 – 115	lph3 = x	2b. Integer	Current phase 3	
120 – 121	Pph3 = x	2b. Integer	Current phase 3	
127 – 128	Prph3 = x	2b. Integer	Reactive power phase 3	
132 – 133	RappW = x	2b. Integer	Transformer ratio	
138 – 139	Ptot = x	2b. Integer	Power total	
145 – 146	Prtot = x	2b. Integer	Reactive power total	
150	Cur_Tar	1b. Integer	Current tariff	x (= 0 for WDM)

Unit with multiplier	DM	WDM
I (Current)	0.1 [A]	0.1 (5/5) [A] 1 (all other) [A]
U (Voltage)	1 [V]	1 [V]
P _{active} (Power)	0.01 [kW]	0.1 [kW]
P _{reactive} (Reactive power)	0.01 [kVAR]	0.1 [kVAR]
E (Consumption)	0.01 [kWh]	0.1 [kWh]

7. Telegram structure (detailed)

Byte	Value	Description	Byte	Value	Description
1	0x68	Start	27	0x8C	DIF
2	0x92	Field length	28	0x11	DIFE
3	0x92	Field length	29	0x04 0x05	VIF 0.01 kWh 0.1 kWh
4	0x68	Start	30	EpaT1_4	T1 Partial
5	0x08	C	31	EpaT1_3	
6	A	Primary address	32	EpaT1_2	
7	0x72	CI	33	EpaT1_1	
8	x	ID1 (LSB)	34	0x8C	DIF
9	x	ID2	35	0x20	DIFE
10	x	ID3	36	0x04 0x05	VIF 0.01 kWh 0.1 kWh
11	x	ID4 (MSB)	37	EtoT2_4	T2 Total = 0 at WDM
12	0x43	MAN1	38	EtoT2_3	
13	0x4C	MAN2	39	EtoT2_2	
14	x	DEV (Typ-Version)	40	EtoT2_1	
15	02	MED (Electric)	41	0x8C	DIF
16	x	ACC	42	0x21	DIFE
17	0x01 0x02 0x04 0x08 0x10	STAT Application_busy Any_Application_Error Power_low Permanent_Error Temporary_Error	43	0x04 0x05	VIF 0.01 kWh 0.1 kWh
18	0	SIG1	44	EpaT2_4	T2 Partial = 0 at WDM
19	0	SIG2	45	EpaT2_3	
20	0x8C	DIF	46	EpaT2_2	
21	0x10	DIFE	47	EpaT2_1	
22	0x04 0x05	VIF 0.01 kWh 0.1 kWh	48	0x02	DIF
23	EtoT1_4	T1 Total	49	0xFD	VIF
24	EtoT1_3				
25	EtoT1_2				
26	EtoT1_1				
			50	0xC9	VIFE = 1 V
			51	0xFF	VIFE

Byte	Value	Description
52	0x01	VIFE
53	Vph1_2	Voltage phase 1
54	Vph1_1	
55	0x02	DIF
56	0xFD	VIF
58	0xFF	VIFE
57	0xDB 0xDC	VIFE 0.1 A 1 A
59	0x01	VIFE
60	Iph1_2	Current phase 1
61	Iph1_1	
62	0x02	DIF
63	0xAC 0xAD	VIF 0.01 kW 0.1 kW
64	0xFF	VIFE
65	0x01	VIFE
66	Pph1_2	Power phase 1
67	Pph1_1	
68	0x82	DIF
69	0x40	DIFE
70	0xAC 0xAD	VIF 0.01 kVAR 0.1 kVAR
71	0xFF	VIFE
72	0x01	VIFE
73	Prph1_2	Reactive power phase 1
74	Prph1_1	
75	0x02	DIF
76	0xFD	VIF = 1 V
77	0xC9	VIFE
78	0xFF	VIFE
79	0x02	VIFE
80	Vph2_2	Voltage phase 2
81	Vph2_1	
82	0x02	DIF
83	0xFD	VIF
84	0xDB 0xDC	VIFE 0.1 A 1 A
85	0xFF	VIFE
86	0x02	VIFE

Byte	Value	Description
87	Iph2_2	Current phase 2
88	Iph2_1	
89	0x02	DIF
90	0xAC 0xAD	VIF 0.01 kW 0.1 kW
91	0xFF	VIFE
92	0x02	VIFE
93	Pph2_2	Power phase 2
94	Pph2_1	
95	0x82	DIF
96	0x40	DIFE
97	0xAC 0xAD	VIF 0.01 kVAR 0.1 kVAR
98	0xFF	VIFE
99	0x02	VIFE
100	Prph2_2	Reactive power phase 2
101	Prph2_1	
102	0x02	DIF
103	0xFD	VIF = 1 V
104	0xC9	VIFE
105	0xFF	VIFE
106	0x03	VIFE
107	Vph3_2	Voltage phase 3
108	Vph3_1	
109	0x02	DIF
110	0xFD	VIF
111	0xDB 0xDC	VIFE 0.1 A 1 A
112	0xFF	VIFE
113	0x03	VIFE
114	Iph3_2	Current phase 3
115	Iph3_1	
116	0x02	DIF
117	0xAC 0xAD	VIF 0.01 kW 0.1 kW
118	0xFF	VIFE
119	0x03	VIFE
120	Pph3_2	Power phase 3
121	Pph3_1	

Byte	Value	Description
122	0x82	DIF
123	0x40	DIFE
124	0xAC 0xAD	VIF 0.01 kVAR 0.1 kVAR
125	0xFF	VIFE
126	0x03	VIFE
127	Prph3_2	Reactive power phase 3
128	Prph3_1	
129	0x02	DIF
130	0xFF	VIF
131	0x68	VIFE
132	RappW_2	Transformer ratio
133	RappW_1	
134	0x02	DIF
135	0xAC 0xAD	VIF 0.01 kW 0.1 kW
136	0xFF	VIFE
137	0x00	VIFE

Byte	Value	Description
138	Ptot_2	Power total
139	Ptot_1	
140	0x82	DIF
141	0x40	DIFE
142	0xAC 0xAD	VIF 0.01 kVAR 0.1 kVAR
143	0xFF	VIFE
144	0x00	VIFE
145	Prtot_2	Reactive power total
146	Prtot_1	
147	0x01	DIF
148	0xFF	VIF
149	0x13	VIFE
150	0 4	Cur_Tar = 0 for WDM Tarif 1 Tarif 2
151	x	Checksum
152	0x16	Stop

8. Initialisation

Query: SND-NKE

Response: 0xE5

Telegram structure (brief)

0x10	0x40	Padr	Csum	0x16
------	------	------	------	------

Telegram structure (detailed)

Byte	Value	Description
1	0x10	Start
2	0x40	Send or reply, reset
3		Primary address
4		Checksum
5	0x16	Stop

9. Changing primary address

Query: SND_UD

(Byte 6 = actual M-Bus address; Byte 10 = new address)

Response: 0xE5

Telegram structure (brief)

0x68	0x06	0x06	0x68	0x53	Padr
0x51	0x01	0x7A	Neue A	Csum	0x16

Telegram structure (detailed)

Byte	Value	Description
1	0x68	Start
2	0x06	Field length
3	0x06	Field length
4	0x68	Start
5	0x53	C
6		Primary address
7	0x51	CI
8	0x01	DIF
9	0x7A	VIF
10		New address
11		Checksum
12	0x16	Stop

10. Reset ACC (application reset)

Query: SND_UD

Response: 0xE5

Telegram structure (brief)

0x68	0x03	0x03	0x68	0x53	Padr
0x50	Csum	0x16			

Telegram structure (detailed)

Byte	Value	Description
1	0x68	Start
2	0x03	Field length
3	0x03	Field length
4	0x68	Start
5	0x53	C
6		Primary address
7	0x50	CI
8		Checksum
9	0x16	Stop

Reset T_{part} (Application reset with subcode)

Query: SND_UD

(Reset Counter: 0x01 = $T1_{part}$ 0x02 = $T2_{part}$)

Response: 0xE5

Telegram structure (brief)

0x68	0x04	0x04	0x68	0x53	Padr
0x50	Reset	Csum	0x16		

Telegram structure (detailed)

Byte	Value	Description
1	0x68	Start
2	0x04	Field length
3	0x04	Field length
4	0x68	Start
5	0x53	C
6		Primary address
7	0x50	CI
8	0x01 0x02	Reset Counter $T1_{part}$ $T2_{part}$
9		Checksum
10	0x16	Stop

11. Secondary address

Query: SND_UD

Response: 0xE5

Telegram structure (brief)

68	0B	0B	68	53	FD
52	ID1	ID2	ID3	ID4	MAN1
MAN2	DEV	MED	Csum	16	

Telegram structure (detailed)

Byte	Value	Description
1	0x68	Start
2	0x0B	Field length
3	0x0B	Field length
4	0x68	Start
5	0x53	C
6	0xFD	Address selection for secondary addressing
7	0x52	CI
8	ID1	ID1
9	ID2	ID2
10	ID3	ID3
11	ID4	ID4
12	MAN1	MAN1
13	MAN2	MAN2
14	DEV	DEV
15	MED	MED
16	Csum	Csum
17	0x16	Stop

Fellbach

Eltako Headquarter
Hofener Straße 54
70736 Fellbach
☎ 0711 94350000
☎ 0711 5183740
✉ info@eltako.de
✉ kundenservice@eltako.de

Baden-Württemberg (West)

Sales representative
Carsten Krampe
☎ 0173 3180392
✉ krampe@eltako.de

Baden-Württemberg (East)

Sales representative
Philipp Wecker
☎ 0162 2575122
✉ wecker@eltako.de

Bavaria (North)

Horst Rock
91126 Schwabach
☎ 09122 61179
☎ 09122 61159
✉ rock@eltako.de

Bavaria (South)

Elka Hugo Krischke GmbH
82024 Taufkirchen
☎ 089 3090409-0
☎ 089 3090409-50
✉ krischke@eltako.de

Berlin/Brandenburg

Sales representative
Kristian Neff
☎ 0162 2575123
✉ neff@eltako.de

Hamburg/Schl.-Holstein/Bremen

Sales representative
Gunnar Wetteborn
☎ 0176 13582502
✉ wetteborn@eltako.de

Hesse

Sales representative
Daniel Böth
☎ 0173 3180391
✉ boeth@eltako.de

Lower Saxony

Sales representative
Detlef Hilker
☎ 05152 6984480
☎ 0173 3180390
✉ hilker@eltako.de

Mecklenburg-Vorpommern/ Brandenburg (North)

Sales representative
Klaus-Peter Schmitz
☎ 03843 215884
☎ 0176 13582501
✉ schmitz@eltako.de

North Rhine-Westphalia (North)/ Lower Saxony (West)

Sales representative
Kai Sepp
☎ 0152 09351347
✉ sepp@eltako.de

Rhineland and Lower Rhine

Sales representative
Markus Leimbach
☎ 0176 13582522
✉ leimbach@eltako.de

Rhineland-Palatinate/Saarland

Sales representative
Rainer Brilmayer
☎ 0176 13582516
✉ brilmayer@eltako.de

Ruhr/Sauerland/Siegerland

Sales representative
Mark Simon
☎ 0152 09351348
✉ simon@eltako.de

Saxony

Sales representative
Mario Geißler
☎ 0162 2575121
✉ geissler@eltako.de

Thuringia/Saxony-Anhalt

Sales representative
Andreas Misch
☎ 0176 13582505
✉ misch@eltako.de

Austria (West)

Representative Robert Goedicke
☎ +43 664 1823322
✉ goedicke@eltako.com

Austria (East)

Representative Jürgen Harnisch
☎ +43 699 18139294
✉ harnisch@eltako.com

Austria (East)

Representative Robert Papst
☎ +43 664 1844122
✉ papst@eltako.com

Austria (East)

Representative Winfried Rac
☎ +43 660 8081310
✉ rac@eltako.com

Belgium/France/ Luxembourg

Serelec n.v.
B-9000 Gent
☎ +32 9 2234953
✉ info@serelec-nv.be

Cyprus

MeshMade Ltd
CY 1096, Nicosia
☎ www.meshmade.com

Denmark

SOLAR A/S
DK-6600 Vejlen
☎ www.solar.dk

Finland

Representative Riku Mäki
FIN-15560 Nastola
☎ +358 44 078 5068
✉ riku@eltako.com

Gulf area

M/S Golden Sand Trading
U.A.E. – Dubai
☎ www.goldensandtrading.net

Hong Kong, Malaysia, Macao, Singapore, the Philippines

TELCS Ltd.
HK-Hong Kong
☎ www.telcs-design.com

Hungary

ELCON Electronic KFT
H-1105 Budapest
☎ www.elcon.hu

Iceland

Reykjafell Ltd.
IS-125 Reykjavik Iceland
☎ www.reykjafell.is

Ireland

Inter-Konnect
IRL-Dublin
☎ www.interkonnect.ie

Israel

Avital B.S. Ltd.
IL-Holon
☎ avitalbs.com

Italy

Representative Tommaso Scrofani
I-64025 Pineto TE
☎ +39 085 9491796
☎ +39 347 3774888
✉ scrofani@eltako.com

Netherlands (North)

Representative Hans Oving
NL-7701 W Dedemsvaart
☎ +31 6 21816115
✉ oving@eltako.com

Netherlands (South)

Representative Dennis Schellenberg
D-47652 Weeze
☎ +31 6 50419067
✉ schellenberg@eltako.com

Newzealand

Direct Control Ltd.
NZ-Auckland 1141
☎ www.directcontrol.co.nz

Norway

Malfhe Winje Automasjon AS
NO-1415 Oppgard
☎ www.mwg.no

Poland

ASTAT Logistyka Sp z o.o.
Dobrowskiego 441
PL-60-451 Poznan
☎ www.astat.com.pl

Portugal

TEV2, Lda
P-4470-434 Maia
☎ www.tev.pt

Russia

ATLAS Group JSC
RU-127591 Moscow
☎ www.atlasgroup.ru

Sweden (North/Middle)

Representative Patrick Savinainen
S-69332 Degerfors
☎ +46 070 9596906
✉ patrick@eltako.com

Sweden (East)

Representative Dan Koril
S-57010 Korsberga
☎ +46 070 3201102
✉ dan@eltako.com

Sweden (West)

Representative Daniel Niklasson
S-44292 Romelanda
☎ +46 73 5815692
✉ daniel@eltako.com

Sweden (South)

Representative Fredrik Hofvander
S-24632 Löddeköpinge
☎ +46 70 1702130
✉ fredrik@eltako.com

Sweden (Stockholm)

Representative Niklas Lundell
S-11330 Stockholm
☎ +46 70 4875003
✉ niklas@eltako.com

Switzerland

Demelectric AG
CH-8954 Geroldswil
☎ www.demelectric.ch

Spain

Representative Thomas Klassmann
E-08398 Santa Susanna
☎ +34 93 767 8557
☎ +34 650 959702
✉ klassmann@eltako.com

South Africa

Innomatic (Pty) Ltd. - Franz Markl
ZA-Midrand
☎ www.innomatic.co.za

Technical support:

☎ +49 176 13582514 ✉ thuenta@eltako.de

Export Sales Manager:

☎ +49 173 3180383 ✉ export@eltako.de



Eltako GmbH

Hofener Straße 54,
D-70736 Fellbach

☎ +49 711 94350000 ☎ +49 711 5183740
✉ info@eltako.de ☎ eltako.com ☎ eltako-wireless.com