Wireless Pushbuttons F4T55B-





Wireless pushbutton with rocker



Wireless pushbutton with double rocker

F4T55B- Wireless pushbutton

Wireless pushbutton for single mounting 80x80x15mm or mounting in the 55mm switch system. Whisper quiet and with battery (lifetime 2-5 years). With rocker and double rocker. Smart Home sensor.

The scope of supply comprises a mounting base, an attachment frame with snapped-on electronics, a frame R1, a rocker and a double rocker.

Wireless pushbuttons with one rocker can transmit two evaluable signals: press rocker up and press rocker down. Wireless pushbuttons with double rocker can transmit four evaluable signals: press two rockers up or down.

The mounting base can be screwed onto a flat surface or glued to the wall, on glass or on furniture using the enclosed adhesive foil. Use the sleeves in the 55 mm socket box for screw mounting.

Snap the large rocker so that the markings 0 and 1 on the back line up with the same markings on the wireless module.

Installation only on a level surface: Screw on or glue mounting plate. First snap on the frame and then clip on the attachment frame with the electronics. Insert the enclosed button cell in the battery compartment with the + marking pointing upwards. When you fit the rocker, the 0 mark on the rear must always be on top.

We recommend stainless-steel countersunk screws 2.9x25mm, DIN 7982 C, for screw connections. Both with rawl plugs 5x25mm and with 55mm switch boxes. See chapter Z: ,Accessories'.

All you need to do to change the CR1632 button cell is remove the rocker. The electronics integrated in the wireless pushbutton can be taught-in encrypted as described in the operating instructions in all encryptable actuators of the Series 61 and Series 71 as well as the FAM14. Encryptable actuators bear the pictogram p-0.

Rockers and double rockers laser engraved page 8-14.

