



Wireless pushbutton with intermediate frame and rocker (without frame)



Wireless pushbutton with intermediate frame and double rocker (without frame)

FT4CH-

Wireless pushbutton Feller Edizio due

Wireless 4-way pushbutton for internal frame dimensions 60x60 mm, 15 mm high. Generates the power for wireless telegrams itself when the button is pressed, therefore there is no connecting wire and no stand-by loss. With rocker and double rocker. Also for cover frames from ABB Normelec and Hager.

For Swiss cover frames from ABB Normelec, Feller and Hager.

The scope of supply comprises one large rocker, one double rocker, one intermediate frame (all same colour), the mounting base, the wireless module and one adhesive foil.

Wireless pushbuttons with one rocker can transmit two evaluable signals: press rocker up and press rocker down. Wireless pushbuttons with double rocker can transmit four evaluable signals: press two rockers up or down.


The mounting base can be screwed onto a flat surface or glued to the wall, on glass or on furniture using the enclosed adhesive foil. Use the sleeves in the 55 mm socket box for screw mounting. The double rocker is snapped onto the wireless module at the factory. If the double rocker is replaced by the large rocker, remove the rocker halves by pulling off to the front. Do not bend towards the middle. Then snap the large rocker so that the markings 0 and I on the back line up with the same markings on the wireless module.

Adhesion: First adhere *the mounting base and intermediate frame* – with the latches pointing at the top and bottom. Then snap on the set *comprising the wireless module and rocker* – with the marking 0 on the back always pointing up.

Before screwing, remove the mounting base from the intermediate frame. To do this, press the latches on the mounting base outwards. Then screw the mounting base – with the latches at top and bottom –, snap on the frame with the intermediate frame and snap on the set *comprising the wireless module and rocker* – with the marking 0 on the back always pointing to the top.

We recommend stainless-steel countersunk screws 2.9x25 mm, DIN 7982 C, for screw connections. Both with rawl plugs 5x25 mm and with 55 mm switch boxes.

See chapter Z: 'Accessories'.

The wireless module integrated in the wireless pushbutton can be taught-in encrypted as described in the operating instructions in all encryptable actuators of the Series 61 and Series 71 as well as the FAM14. This requires the FTVW wireless pushbutton encryption rocker on page 8-5. Encryptable actuators bear the pictogram .

Rockers laser engraved page 8-14

FT4CH-hg	Wireless pushbutton without battery or wire, without frame, light grey	EAN 4010312300985	44,50 €/pc.
FT4CH-sz	Wireless pushbutton without battery or wire, without frame, black	EAN 4010312300992	44,50 €/pc.
FT4CH-w	Wireless pushbutton without battery or wire, without frame, white	EAN 4010312300978	44,50 €/pc.