



Wireless mini pushbutton
with double rocker

FMT55/4-

Wireless mini pushbutton


Wireless mini pushbutton, 55x55 mm external dimensions, 15 mm high, with double rocker. Generates the power for wireless telegrams itself when the button is pressed, therefore there is no connecting wire and no standby loss. Smart Home sensor.

The scope of supply comprises the frame R55, one double rocker DW55, the wireless module and one adhesive foil.

Wireless pushbuttons with double rocker can transmit four evaluable signals: press two rockers up or down.

The mounting base can be screwed onto a flat surface or glued to the wall, on glass or on furniture using the enclosed adhesive foil.

Before screwing on the device, press the wireless module and rocker from the rear out of the frame. Afterwards screw on the frame with the right and left safety latches and click the *wireless module with rocker* – the marking O on the back is always up – into place.

The wireless module integrated in the wireless pushbutton can be taught-in encrypted as described in the operating instructions in all encryptable actuators of the Series 61 and Series 71 as well as the FAM14. This requires the FTVW wireless pushbutton encryption rocker on page 8-5. Encryptable actuators bear the pictogram .

Double rockers laser engraved page 8-14.



FMT55/4-rw	Wireless mini pushbutton without battery or wire, with double rocker, pure white	EAN 4010312312544	41,00 €/pc.
FMT55/4-wg	Wireless mini pushbutton without battery or wire, with double rocker, pure white glossy	EAN 4010312312568	41,00 €/pc.