



Wireless flat pushbutton with rocker



Wireless flat pushbutton with double rocker

## FT4F- Wireless flat pushbutton

Wireless 4-way flat pushbutton, 80x80 mm external dimensions, internal frame dimensions 63x63 mm, 15 mm high. Generates the power for wireless telegrams itself when the button is pressed, therefore there is no connecting wire and no standby loss. With rocker and double rocker. Smart Home sensor.

**The scope of supply comprises the frame R1F, a flat rocker WF, a flat double rocker DWF (all same colour), an attachment frame BRF, the mounting base HP, the wireless module and one adhesive foil.**

Wireless pushbuttons with one rocker can transmit two evaluable signals: press rocker up and press rocker down. Wireless pushbuttons with double rocker can transmit four evaluable signals: press two rockers up or down.

The mounting base can be screwed onto a flat surface or glued to the wall, on glass or on furniture using the enclosed adhesive foil. Use the sleeves in the 55 mm socket box for screw mounting.

The double rocker is snapped onto the wireless module at the factory. If the double rocker is replaced by the large rocker, remove the rocker halves by pulling off to the front. Do not bend towards the middle. Then snap the large rocker so that the markings 0 and I on the back line up with the same markings on the wireless module.

**Adhesion:** First adhere the set *comprising the mounting base, frame and attachment frame* – with the latches pointing at the top and bottom. Then snap on the set *comprising the wireless module and rocker* - with the marking 0 on the back always pointing up.

**Before screwing,** remove the mounting base from the frame and the attachment frame. To do this, press the latches on the mounting base outwards. Then screw the mounting base – with the latches at top and bottom –, snap on the frame with the attachment frame and snap on the set *comprising the wireless module and rocker* – with the marking 0 on the back always pointing to the top.

We recommend stainless-steel countersunk screws 2.9x25 mm, DIN 7982 C, for screw connections. Both with rawl plugs 5x25 mm and with 55 mm switch boxes.

See chapter Z: „Accessories“.

**The Eltako frame can be replaced on installation at any time by a design frame with internal dimensions 63x63 mm from other manufacturers.**

**The wireless module integrated in the wireless pushbutton can be taught-in encrypted as described in the operating instructions in all encryptable actuators of the Series 61 and Series 71 as well as the FAM14. This requires the FTVW wireless pushbutton encryption rocker on page 8-5. Encryptable actuators bear the pictogram**

Rockers and double rockers laser engraved page 8-14.



FT4F-ai	Wireless flat pushbutton without battery or wire, coated/aluminium paint	EAN 4010312306697	48,80 €/pc.
FT4F-an	Wireless flat pushbutton without battery or wire, anthracite	EAN 4010312302996	41,00 €/pc.
FT4F-rw	Wireless flat pushbutton without battery or wire, pure white	EAN 4010312302941	41,00 €/pc.
FT4F-sz	Wireless flat pushbutton without battery or wire, black	EAN 4010312302965	41,00 €/pc.
FT4F-wg	Wireless flat pushbutton without battery or wire, pure white glossy	EAN 4010312302972	41,00 €/pc.
FT4F-ws	Wireless flat pushbutton without battery or wire, white	EAN 4010312302927	41,00 €/pc.