



FVST

Wireless encryption plug

The encryption for the wireless window-door contacts FTKE, the wireless position switches FPE-1 and FPE-2 as well as the wireless flat pushbuttons F1FT65 and FFT55Q can be activated and deactivated with the wireless enryption plug FVST.

FTKE and FPE
Activate encryption:

FTKE and FPE
Deactivate encryption:



Insert the encryption plug and pull the lever.

F1FT65 and FFT55Q Activate encryption:

F1FT65 and FFT55Q
Deactivate encryption:



Insert the encryption plug and operate the rocker.

FVST Wireless encryption plug EAN 4010312907290 **1,00 €/pc.**