

## FTVW


## Wireless pushbutton encryption rocker

The wireless pushbutton encryption rocker FTVW can be used to activate and deactivate the encryption of Eltako wireless pushbuttons, hand-held wireless transmitters and wireless remote control with batteryless and cordless EnOcean wireless modules.

First, remove the rockers. The wireless modules must be removed from wireless mini hand-held transmitters FMH8 and placed on a flat surface.

### Activate encryption:

The label **encryption ON** is located on the top side.

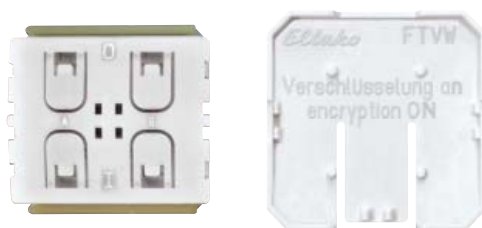

Press the encryption rocker on the wireless module and press the rocker twice.

### Deactivate encryption:

The label **encryption OFF** on the FTVW is located on the top side.



Press the encryption rocker on the wireless module and press the rocker once.

Teach-in of encryptable EnOcean wireless modules is described in the operating instructions for encryptable actuators.

This is identified by the pictogram .

FTVW

Wireless pushbutton encryption rocker

EAN 4010312907030

1,40 €/pc.